



Power Adapter

- Connect with power directly, convert 220V-240V power into 12V or 24V then supply power to control board and lock
- Can offer suitable plug according to customers' requirements



RS485-USB Adaptor

- Connect with PC, transfer commands from PC to lock control board



Cable for lock to CU

- Connect lock and CU board
- Support customized connector model and cable length



Power cable for BU



Power cable for CU



LED indicator



RS485-232 Adaptor



Emergency unlocking line



Cable for IR to CU



Ethernet Cable